



Installation Steps

- Step 1:** Remove the mounting screw located across from the M.2 slot.
Step 2: Secure the M.2 SSD using the mounting knob

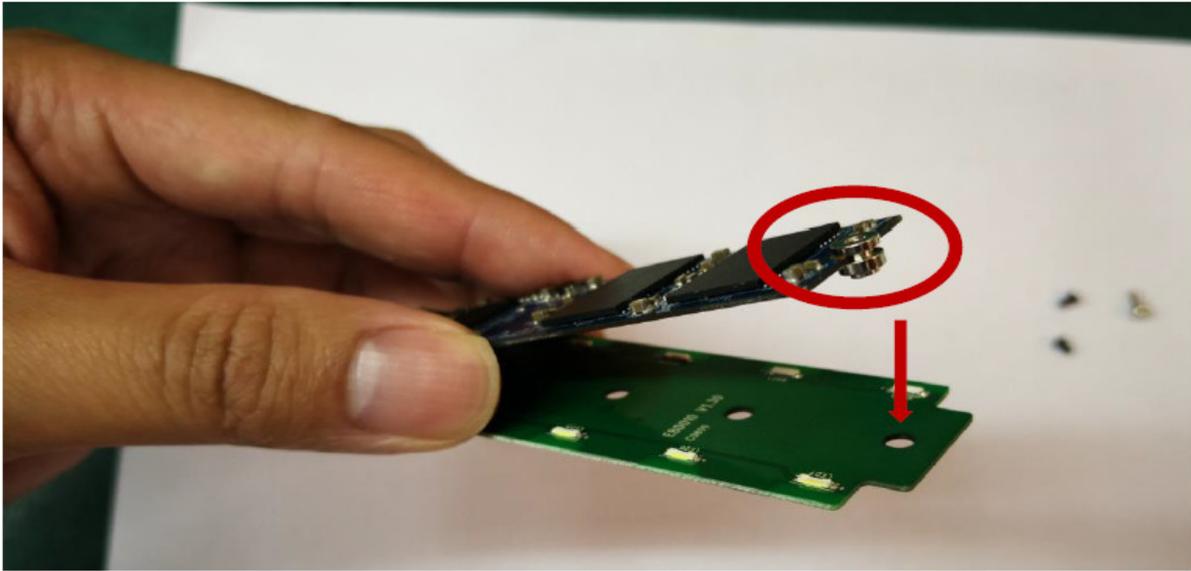

- Step 3:** Carefully insert the M.2 SSD into the slot

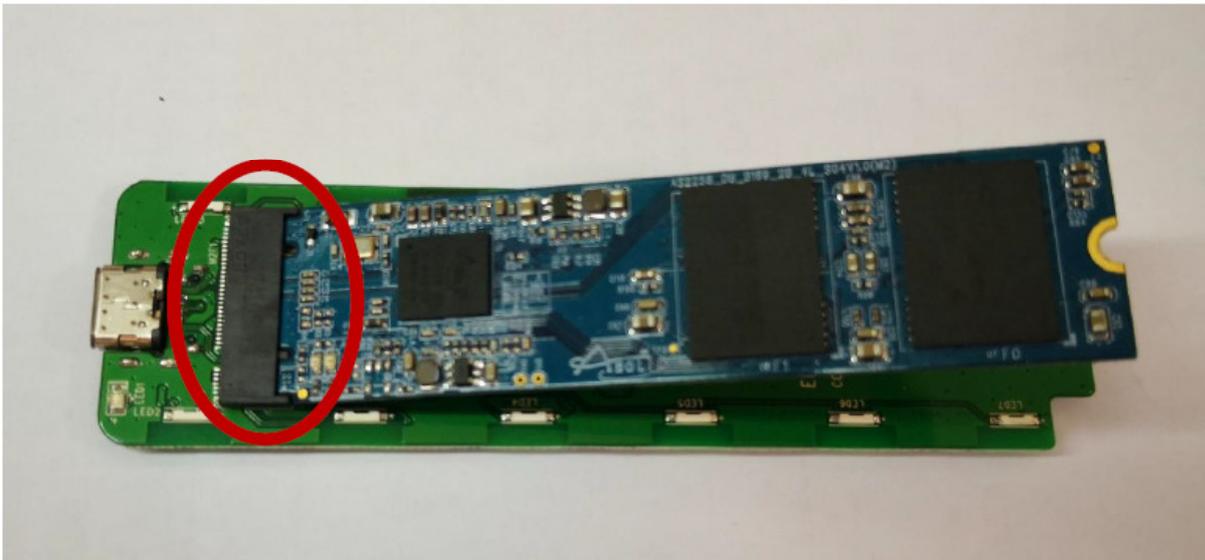


- Step 4:** Paste the thermal pad onto the M.2 SSD, remember to remove the liner later




Step 5: Secure the screw at the back of the the case




Step 6: Remove all double-sided tape liner which is placed on the cases, positions as shown for correct upper & lower case.

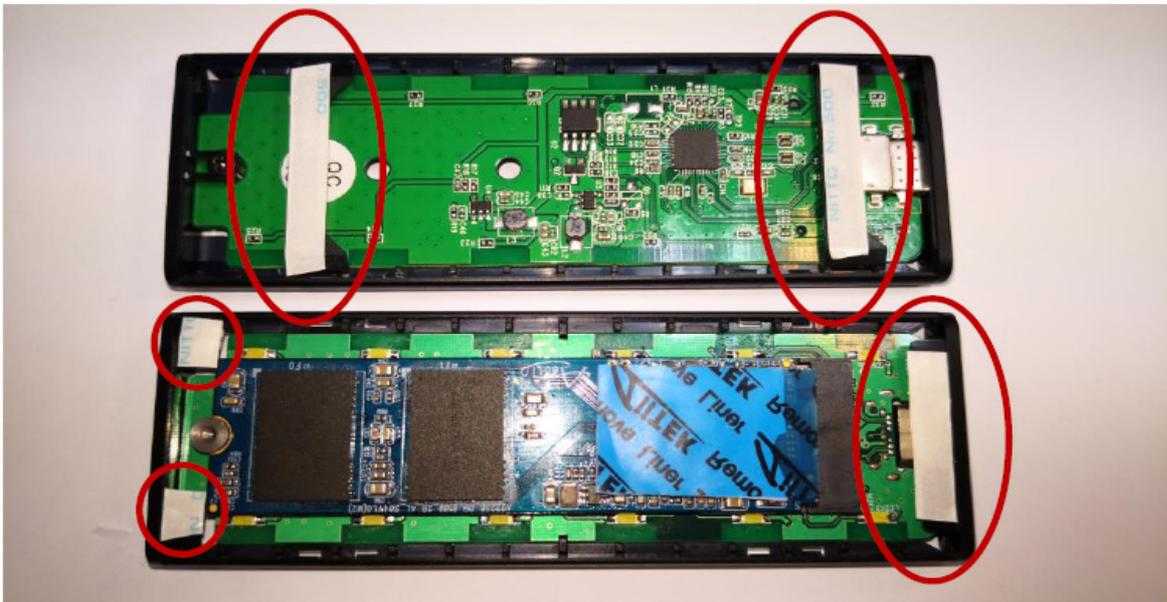

Step 7: Place the upper and lower case and the positions of the cassette are as shown

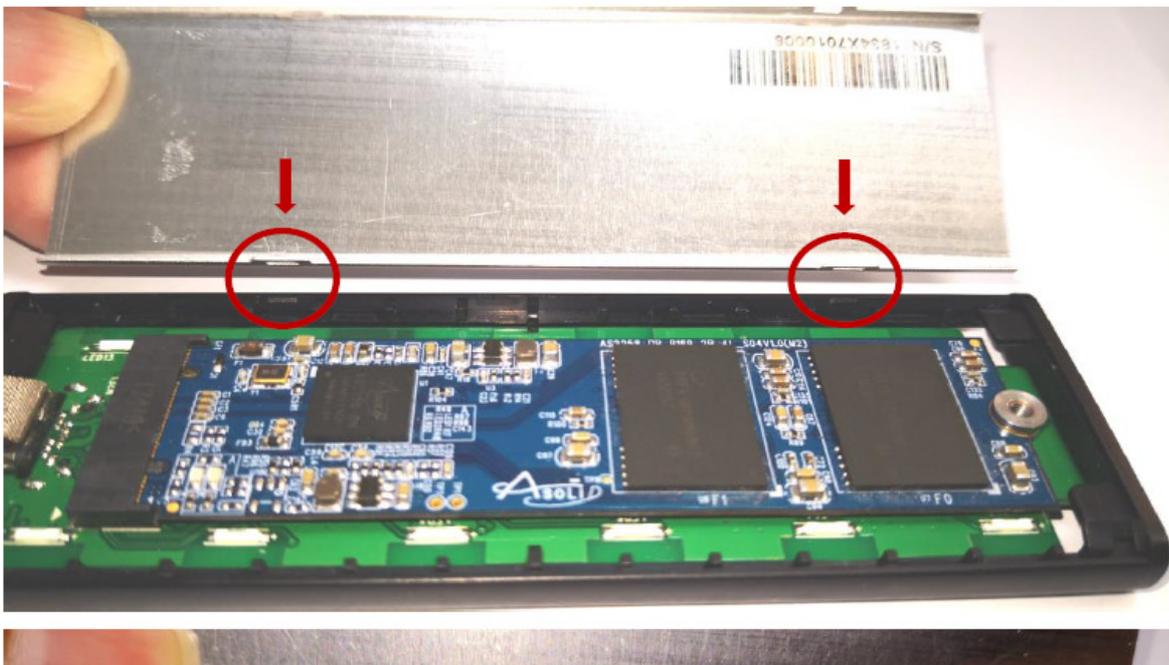

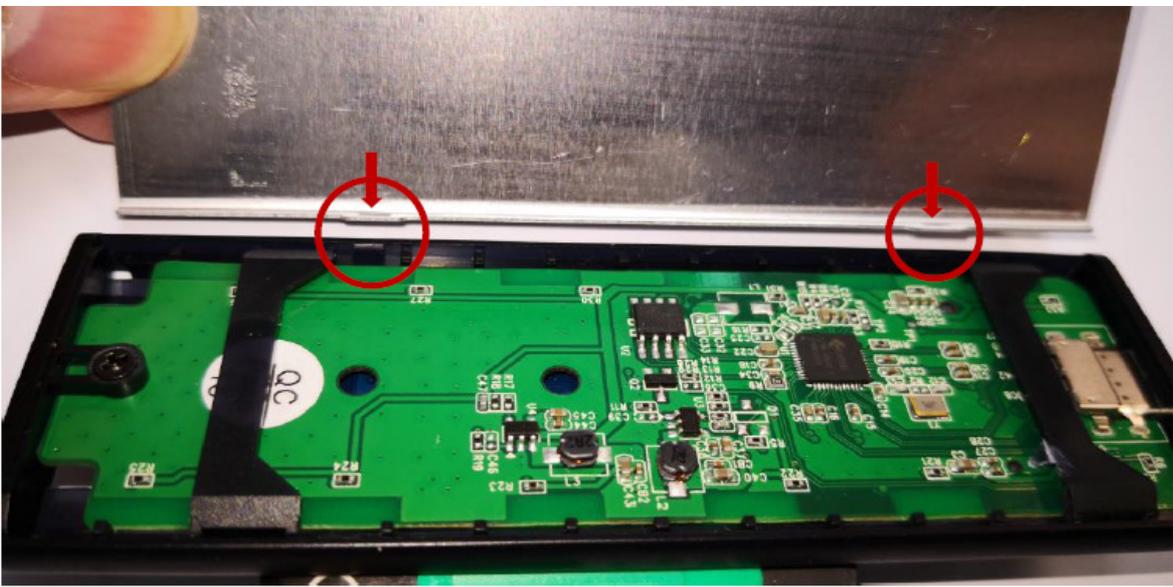

That's it! You're done! Your new portable SSD is now installed.

